



Attach latch-cable in one of two ways shown adjacent.

When the correct adjustment has been established, secure the plastic crank to the square spindle with starlock washer (Item 6).



Bunford Lane, Yeovil, Somerset, BA20 2YA Tel: 01935 443722 Fax 01935 443744